


smonet[®]

Start Your Smart Life Easily

Model: CR6 Pro

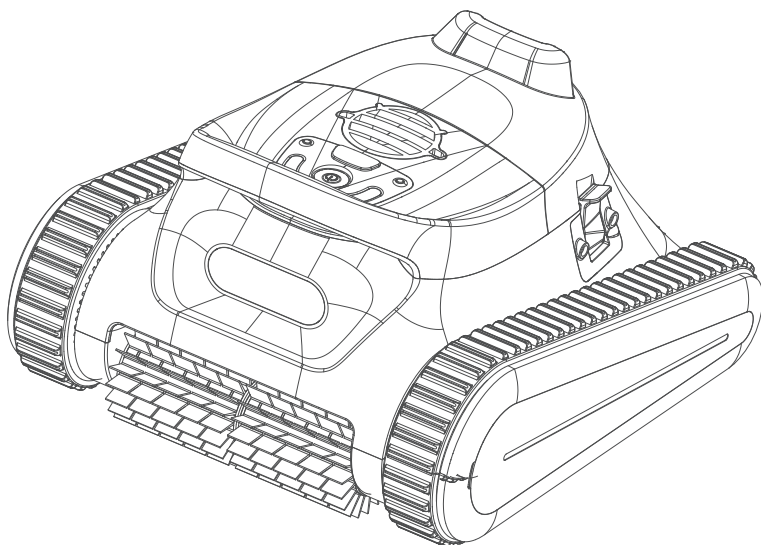

Robotic Pool Cleaner User Manual 2.0

Read and Save the Instructions

USER GUIDE VIDEO



CUSTOMER SERVICE

All Smonet products come with lifetime support. Feel free to contact us if you have any questions.



Toll Free:

1-888-502-9980



E-mail:

poolrobot@smonet.com



Mon-Sun:

12:00 p.m. - 7:00 p.m. (EDT)

8:00 p.m. - 5:00 a.m. (EDT)



Live Customer Support



WhatsApp

CONTENTS

PRODUCT INTRODUCTION	02
1. WARNINGS AND CAUTIONS	02
2. IN THE BOX	03
3. SPECIFICATIONS	03
4. LED STATUS	04
5. FREE UPGRADING WATERLINE CLEANING MODE	04
6. CLEANING MODES	04
USING THE POOL CLEANER	05
1. CHARGING	05
2. PLACEMENT INTO THE POOL	05
3. REMOVAL FROM THE POOL	06
4. CLEANING	07
5. REPLACEMENT OF BATTERY	08
OFF-SEASON STORAGE	10
FAQs	10
WARRANTY	12
CUSTOMER SERVICE	12

1. PRODUCT INTRODUCTION

Thank you for purchasing SMONET Robotic Pool Cleaner.

Rest assured that your Smonet Robotic Pool Cleaner will provide you with reliable, convenient and cost-effective pool cleaning.

Its reliable filtration in all pool conditions, active brushing, and all-surface climbing brush ensures maximum pool hygiene.

The Robotic Pool Cleaners by Smonet deliver advanced cleaning technology and an intelligent, cable-free cleaning experience with easy maintenance. You and your family will be free to enjoy swimming with confidence that your pool is completely clean.


1. WARNINGS AND CAUTIONS

Read this manual carefully and use the device accordingly. We are not liable for any loss or injury caused by improper use of the device.

1. Be sure to charge the device before the first use.
2. Make sure the water depth of the pool is at least 19.5 in (50 cm) from the top of the device for optimal cleaning performance.
3. The device comes with a lithium battery. Do not disassemble the sealed compartment without authorization. Protect the device from direct sunlight and impact.
4. Keep people and animals out of the pool while the device is in use. Do not leave children unsupervised while using the device.
5. Turn off the device before cleaning the filters.
6. During the off-season period, charge the device once a month to protect its battery.
7. Use the Pool Cleaner in the following water conditions only:

Chlorine	Max 4 PPM
pH	7.0 - 7.8 PPM
Temperature	41 - 95 °F (5 - 35 °C)
NaCl	Maximum = 5000 PPM



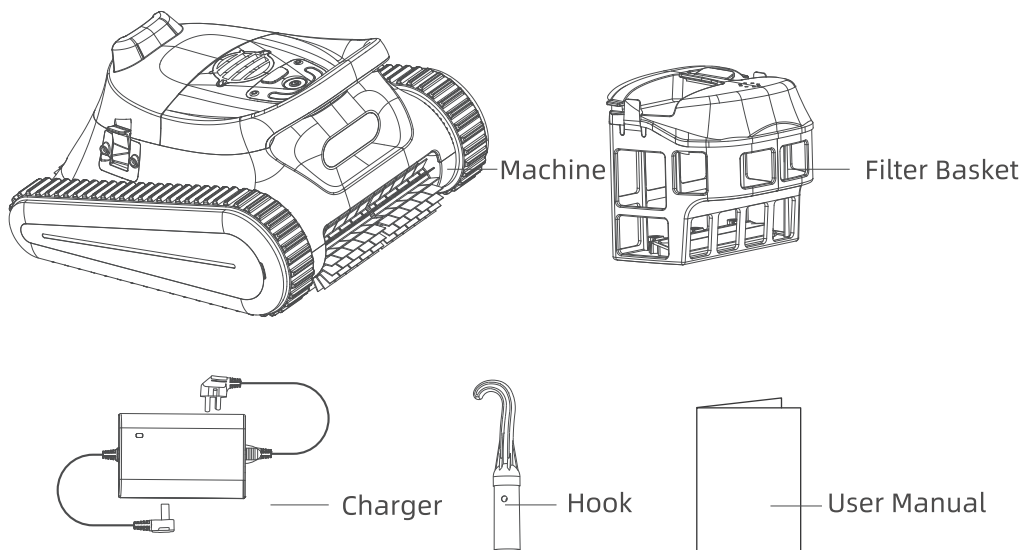


2. IN THE BOX



3. SPECIFICATIONS

Applicable pool size	Up to 2000 sq ft (180 m ²)
Water depth supported	1.6-16.4 ft (0.5-5 m)
Charger input	100-240 VAC, 50/60 Hz
Lithium battery capacity	7800 mAh
Battery life	≈2.5 hours
Charging time	2.5 hours
Filtration system	Filter Basket: 250um, for regular cleaning
Moving speed	59 ft/min / 18 m/min
Dimensions (L x W x H)	16.7*15.1*9.8 in / 424.7*384*250.42 mm
Net weight	19.8 lb / 9 kg
Waterproof level	IP68
Storage temperature	32 to 104°F (0 to 40°C)

4. LED STATUS

LED Color	State	Lamplight
Blue 	Initialization phase	Flash per 1 second
	Free time	Flash per 3 seconds
	Working	Solid
Yellow 	Device is abnormal	Flash per 1 second
Red 	Low battery	Flash per 1 second
	Charging	Solid
Green 	Fully charged	Solid
Purple 	Failure to get out of trouble	Solid

5. UPGRADING CLEANING MODES WITH THE APP

a. Search for and download either the "Smonet Robot" or "Unlock SEAUTO" app from Google Play or the App Store.

b. Activate the cleaner and the Bluetooth on your phone. Ensure your phone is close to the cleaner. For detailed instructions on how to upgrade your cleaner, please contact us at poolrobot@smonet.com

6. CLEANING MODES

Modes	Cleaning Coverage	Voice Reminder
All-cover mode	Covers all areas	All cover mode
Wall-only mode	Only cleans the wall	Wall only
Floor-only mode	Only cleans the floor	Floor only


Note:

- a) The modes can be selected by pressing the switch button to shift.
- b) When a mode is selected, it will give a voice alert of the current mode.
- c) When turning on the machine, it will be in All-cover mode as default.


2. USING THE POOL CLEANER

1. CHARGING

a. Connect the machine to the power supply to start charging. The LED light will be red solid.

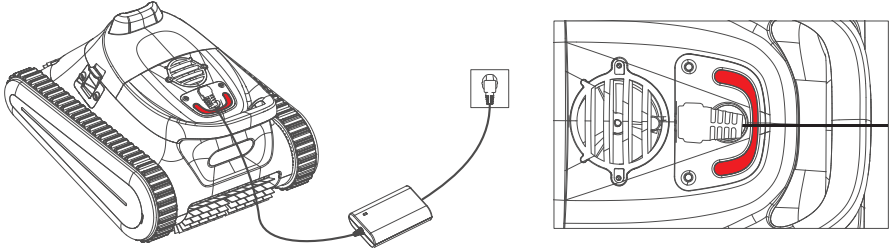

b. The LED light will turn solid green when the device is fully charged, and will then turn off automatically after 10 minutes.

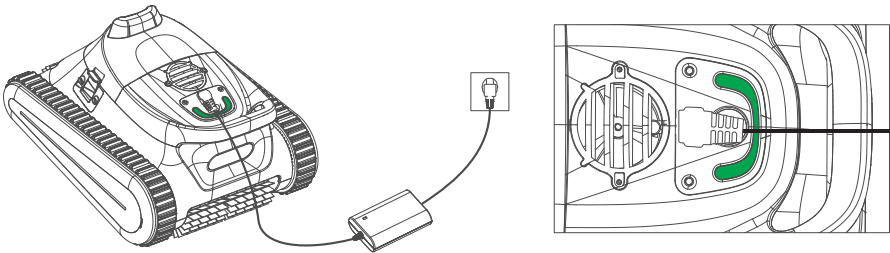


Note: Charging should be done indoors to prevent damage to the charger, the charger is not waterproof, not sunproof.


2. PLACEMENT INTO THE POOL

Note: After turning on the machine, the machine will automatically clean the entire pool, including wall and floor (All-cover mode). If you want to switch to other modes, please upgrade your pool cleaner first (See page 4).

a. Press the button for seconds to turn it on. Press it again to switch from All-cover mode to other cleaning modes (Wall-only mode or Floor-only mode).

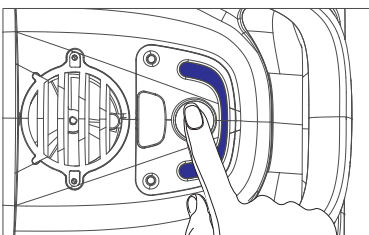


b. Put the device into the pool, making sure that the water surface is above the top of the machine to enable proper use. The LED light will turn solid blue when it starts cleaning the pool.

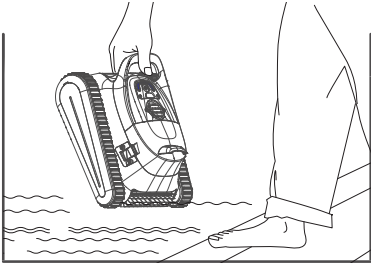


3. REMOVAL FROM THE POOL

Note: Please attach the hook (included in your packaging) to a compatible pole, the pole is not included in the package.

a. Hook up the machine by using a pole.

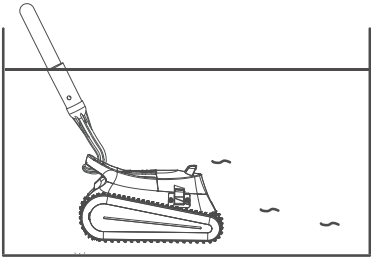



b. Before cleaning the filter, press and hold to switch off the cleaner.

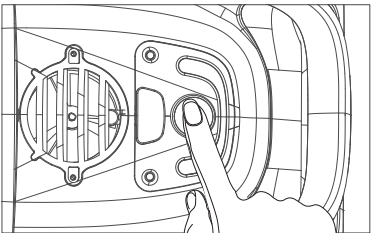


4. CLEANING

Note: Clean the basket before it dries out. Make sure the machine is off.



a. Unbuckle both sides of the filter basket to open the lid.

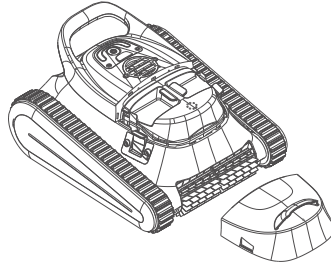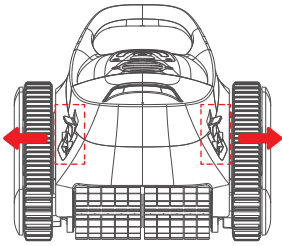


b. Remove the filter basket.

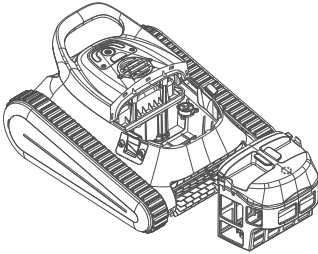


c. Open the cap of the basket.

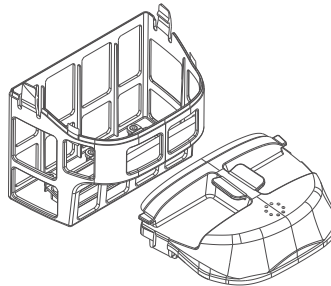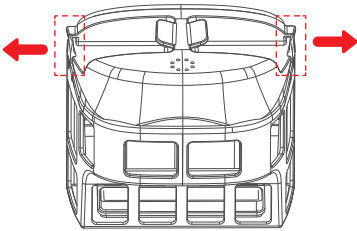

d. Clean the filter basket.

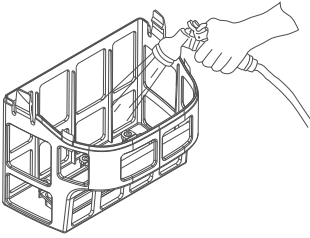

e. Assemble the robot.

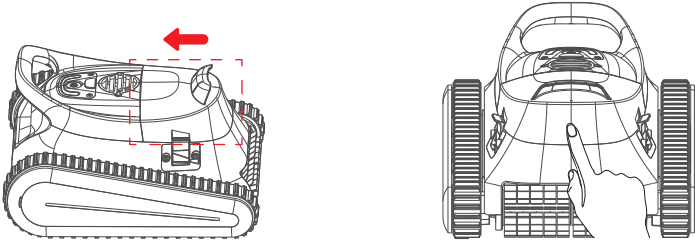


5. REPLACEMENT OF BATTERY

Note: To prevent any negative impacts on the performance of a new battery, please allow the machine to stand for 2 days before replacement to ensure the complete evaporation of moisture.


Follow the steps below to replace the battery, and ensure that the pool cleaning robot achieves an optimal cleaning state.

a. Remove the six screws that are used to secure equipment and remove the existing battery.

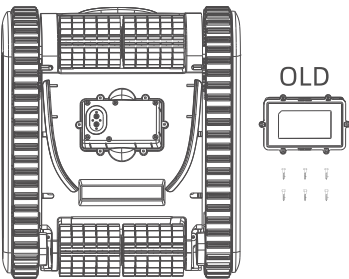


b. Insert the new battery according to the corresponding contacting positions of used battery.

Note: Before installing a new battery, clean up the water droplets/sand and other foreign objects from the connection position.

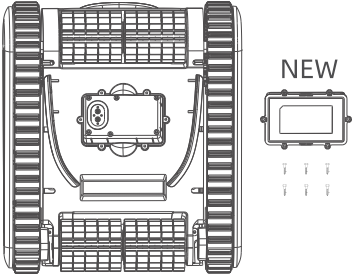

c. Installing, fixing and locking the screws.

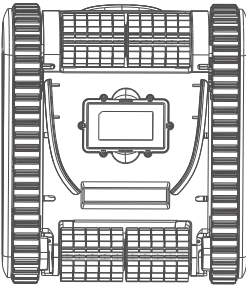

3. OFF-SEASON STORAGE

If the pool cleaner will not be in use for an extended period, perform the following storage steps:

1. Make sure that no water is left in the pool cleaner.
2. Thoroughly clean the filter basket and insert it back into place.
3. Store the pool cleaner in a protected area out of direct sun/rain/frost at a temperature of between 5°C-45°C/41°F-113°F
4. Charge the pool cleaner once per month to protect the battery.

4. FAQs

If the suggested solutions do not solve the problem, please feel free to contact us.

Q: What size of swimming pool is suitable?

A: It is recommended to 180m².

Q: Why doesn't the cleaner respond after turning on the machine?

A: The battery may be dead after a long-time delivery or storage. Please recharge it.

Q: Why can't it climb the wall?

A1: It may be set to the Floor-only Mode. Please press the button to select the right mode.

A2: There is too much garbage or debris in the filter basket. You'll need to remove the basket and clean it.

Q: Why does the cleaner sit at the bottom of the pool, not moving, or moving slowly?

A1: It might be caught in the drain outlet on the pool floor. It will attempt to float in order to free itself. If it remains stuck for several minutes, please use a pole to assist it.

A2: If the cleaner is placed into a dirty pool, it might suck up a lot of debris in a short time. So, please check and clean the filter if necessary.

Q: Why does the front part float while the rear part stays on the floor?

A: It's an intelligent feature of our pool cleaner, to break free from being stuck.

Q: Why does the cleaner automatically switch off after a few hours of charging?

A: It is designed to shut off automatically in 10 minutes after fully charged to protect the battery and ensure its lifespan. So, you can go out with confidence without worrying about charging safety.

Q: What is the issue when the cleaner lights up with a yellow light?

A: The yellow light indicates the cleaner encounters a problem (over-currented due to being stuck, or failure to start). Take the cleaner out and restart it, it should then be ready to work .

Q: How can I get replacement accessories?

A: Please contact your purchase channel. You can also visit our website, or give us a call. We are available to help you out.

Q: How can I buy a long pole and what size is it?


A: We offer a pick-up hook in the box, which is the universal pool accessory, the hook fits a standard pole size with an 1-1/4" (25-32 mm) diameter connection end. You can easily find a pole in your local market or shop online.

Q: Why are there some water droplets inside a newly purchased machine?

A: As every machine is rigorously tested before leaving the factory, including under water test, etc. So, there may be little water left inside, please feel free to use it normally.

Q: Why can't I turn off the cleaner when I take it out of the pool?

A: It is because there is water in the water detection probe, and the cleaner mistakenly thinks that it is still working under the water, so it can be turned off after wiping the probe clean.

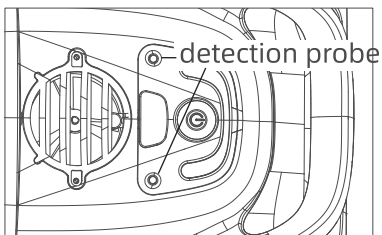

5. WARRANTY

This product has passed all quality control and safety tests, conducted by the technical department of the factory.

1. The warranty is covered for 12 months from the date of its original purchase.
2. There is no extension warranty for the consumables (filter net).
3. This warranty will become void if the product has been altered, misused, or has been repaired by unauthorized personnel.
4. The warranty extends only to manufacturing defects. It does not cover any damage resulting from mishandling of the product by the owner.
5. The order number or record must be presented for any claim or repair during the warranty period.
6. Please email or call us with any warranty issues, or visit our website for more information and support on accessories and consumables.

6. CUSTOMER SERVICE

All Smonet products come with lifetime support. Feel free to contact us if you have any questions.



Toll Free:
1-888-502-9980



E-mail:
poolrobot@smonet.com



Mon-Sun:
12:00 p.m. – 7:00 p.m. (EDT)
8:00 p.m. – 5:00 a.m. (EDT)



Live Customer Support



WhatsApp

Made in China



smonet[®]
Start Your Smart Life Easily

www.smonet.com